


User Manual of ND-P3006 Motorized Turntable

Outstanding intelligent hardware service provider


Thank you for using "Turntable-BKL" product. For your own safety, please read this user manual carefully before install it.

Product Feature

360-degree rotating display product or for product photography shots. Adjustable speed and direction control by remote control or manual button control (Both control methods can be used interchangeably).

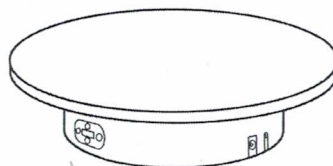


Standard configuration	
Turntable ND-P3006	1 piece
Remote control	1 piece
AC/DC adapter	1 piece

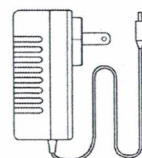

-1-

Specifications

Material	Plastic	Adjustable speeds	1 7RPM-4RPM
Color	White	Control	IR remote/Manual button
Size	Φ300mm*H60mm	Certification	CE/FCC/ROHS
Rotating direction	Anticlockwise, Clockwise	Max load capacity	15KG
Voltage	AC/DC adapter Input: 100v-240v 50/60Hz, Output: DC 12V1A		
Bluetooth name	Z07-5		

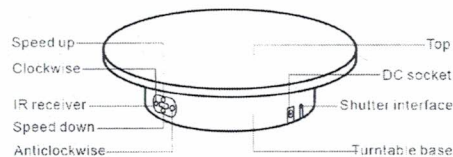


Maintenance and repair

- Disconnect from mains before starting maintenance operation
- We recommend a frequent cleaning of the device. Please use a soft lint-free dry cloth. Never use alcohol or solvents.
- Maintenance should be carried out by qualified professionals only.
- Please use the original packing for transportation in case the turntable need maintenance by manufacturer.
- Should you need any spare parts, please contact us.


-5-

 1. Plug in the power cord of the turntable.
2. turn on the settings of your mobile phone, find and turn on Bluetooth. And then search for the turntable's Bluetooth module device "Z07-5". Click it and start pairing it.
3. After the mobile phone is connected to Bluetooth device "Z07-5" successfully, turn on the mobile phone camera
4. Starts making photos in mobile phone camera by pressing the remote control's shutter key manually, or set the angle automatic shooting mode through the combination keys "CW" + "Angle" key.
5. Under the 360 degree rotation mode, you can directly press the shutter button on the remote control to take photos.
6. Under the angle automatic shooting mode, we must through the combination keys CW "or CCW" + "angle" key to set the Bluetooth automatic shutter. eg. CW "+45", the turntable will stops at each 45 degrees for three seconds and sends a shutter signal to the mobile phone to take a picture, after the 45degree angle rotation is completed fully one rotation, the turntable rotating and its Bluetooth automatic shutter be stopped.
7. The turntable can also use a shutter release to control the digital camera to take pictures automatically under angle automatic shooting mode.



-2-

Remote control instructions

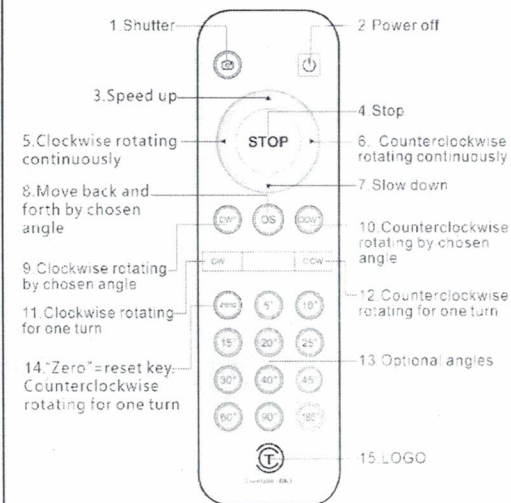

Remarks: "A" stand for the angle keys 5°/10°/15°/20°/25°/30°/40°/45°/60°/90°/180°.

-3-

1. Press "Shutter" button to control camera or smartphone to take a photo automatically when the turntable and camera or smartphone are connected via a matching shutter release.
2. Power off.
3. Speed up.
4. Stop.
5. Clockwise rotating continuously.
6. Counterclockwise rotating continuously.
7. Slow down.
8. "OS" is oscillating motion to move back and forth in any chosen angle. This key only works with the angle key together. Press "OS-A", then turntable move back and forth in the chosen angle.
9. "CW" is the mode to rotate turntable clockwise intermittently under any chosen angle within a circle for one fully turn. This key only works with the angle key together. Press "CW-A", then turntable rotate, pause time for every angle intermittent is about 3 seconds.
10. "CCW" is the mode to rotate turntable counterclockwise intermittently under any chosen angle for one fully turn. This key only works with the angle key together. Press "CCW-A", then starts rotating, pause time for each angle intermittent is about 3 seconds.
11. Clockwise rotating fully one turn.
12. Counterclockwise rotating fully one turn.
13. Except "Zero" key, press any other angle key "A" is invalid. They can only be used together with keys "CW" "CCW" "OS". press "CW" or "CCW-A" to realize angle rotating and release the shutter shooting signal automatically. Press "OS-A" to realize angle rotating at move back and forth mode.
14. "Zero" key, press it and set the current position as the starting position of turntable, and turntable starts counterclockwise rotating fully one turn, then stop.

-4-

Notes

- Please place the shooting items at the center of the turntable for shooting.
- Default start speed at 15s/(4RPM), the difference between each gear is about 3 seconds.
- Keep the children away from the device.
- The ambient temperature must always be between -5°C to +45°C. Use under indoor dry condition.
- Normal noise value within 50 decibels during product operation.
- Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not responsible for any resulting defects or problems.
- Any unauthorized modifications on the device is forbidden due to safety consideration.



Danger of life!
Never touch the device with wet hands, as it could lead to mortal electrical shock or injury!



Official WeChat Account



Home page

-6-

Warranty Card

User's name:

Tel:

Add:

Item No:

Shop's name:

Purchase time:

Maintenance record:

Please keep this card properly

Patented product, Imitation is prohibited.

BKL Industries Limited

Address: Building A2, Fangxing Science & Technology Park, No.13 Baonan Rd., Nanlian, Longgang District, Shenzhen, Guangdong, China 518116
Tel: +86-755-8426 5809
Email: sales@asiabk.com
Web: www.bklturntable.com

-7-