Selens PROTUBE 18



Product Manual

English


Matters needing attention

- Please charge the equipment as soon as possible when out of power. Do not place it without power for a long time.
- 2.Do not look directly when the photographic light is on.
- Do not place any object on the luminaire or allow liquids to flow into it.
- For safety reasons, do not expose the product to excessive heat or exposure to moisture.
- Avoid storing lights with corrosive chemicals.

Product parameters

Power Color temperature CRI TLCI		18W 2500~8000 ± 200K ≥ 96 ≥ 96							
					Illuminance	Distance	0.3m	0.5m	1m
						Brightness	2300Lux	975Lux	360Lux
					LED lamp beads quantity		300		
Type of battery		18650 Lithium battery(12.6V 9000mAh)							
Battery life(At full power)		About 90 minutes (DIMMER;100%)							
Size		Ф50 X 645mm							

Product Structure

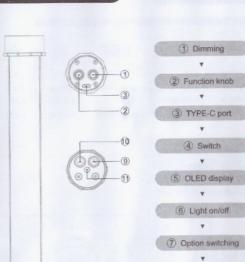

(8) Connected mode

9 Data output port

10 Data input port

① 1/4 port

OLED Liquid Crystal Display



- (3) Battery power
- (2) Numerical adjustment
- 4 Brightness value

Adjustment mode









Connection

Situational effects

Each special effect has four different modes, and different modes bring out different effects.



htning-1 1.T htning-2 2.8 htning-3 3.Fr

2.Slow fault light 3.Fast fault light 4.Emergency flashers low & high beam

2.Fast RGB gradient 3.Fireworks 4.Bar party

RGB

2.Police of 3.Ambuta 4.Fire truc

1.Police car-1 1.Candlelight
2.Police car-2 2.Flame
3.Ambulanco 3.Breathe
4.Fire truck 4.Pulse

In the connection mode setting page, set the mode to DMX mode, then start to use DMX mode, ID represents the address code.

DMX control

DMX mode

DMX mode connection diagram:

Control protocol: international standard DMX-512 signal

- The address code of the lamp is increased in increments of 5 digits (1, 6, 11, 16...)
- Each DMX address code can be reused as required.
- The DMX address code can be any value between 001 and 512.

DMX practical table:

ID	DWX value	control content description
N	0~255 Red changes linearly from dark to light	
N+1	0~255	Green changes linearly from dark to light
N+2	0~255	Blue change linearly from dark to light
N+3	N+3 0~255 Cool white changes linearly from dark to lig	
N+4 0~255 Warm white changes linearly from dark		Warm white changes linearly from dark to light

Product Include





Type-c Data Cable Product Manual

Product Manual




Warranty certificate



- If there is any problem with the product, please go to the authorized service agent to check the machine. Malfunction caused by self-disassembly is not covered by the warranty.
- Note:Warranty allows repair on a replaceable basis, dose not cover the malfunctions caused by repairs.
- The instructions of the manual are based on the company's fully controllable test procedures. If the product design is changed, no further notice.

Master-slave mode online

Master-slave mode connection operation diagram:

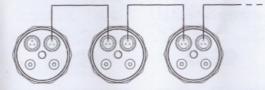

In the connection mode setting page, the host is set to HOST (master) mode, and the slave is set to LINK (slave) mode. The master-slave ID value must be set to the same value before the master-slave online operation can be performed.

(B)

8

3-

-5-

-6-